


CPL2KI00020

### Planning Instructions

#### 1000ft. Fence, 20ft. Spacing

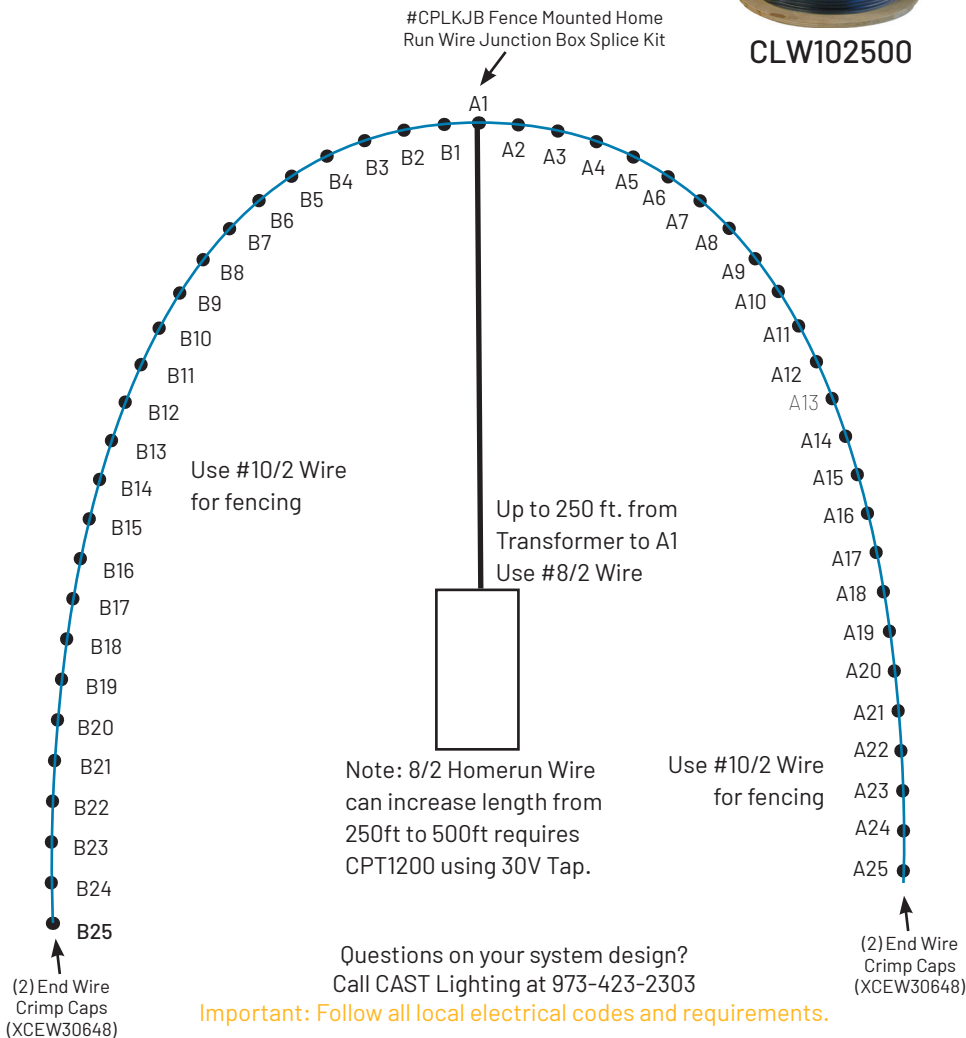

### Kit Contents

Please check that you received all of these components before starting.

- (50) CAST LED Perimeter Lights (CPL2)
- (1) 600VA CAST Perimeter Lighting Transformer (CPT600)
- (1) CAST Photocell (CTPC)
- (2) 500 Ft. Roll CAST #10/2 No-Ox Wire (CLW102500)
- (1) 500 Ft/ Roll CAST #8/2 No-Ox Wire (CLW82500)
- (100) Quick-connect Posi-Tap splice connection (CPQC1) (2 per fixture)
- (7) Bag 100 pc. 11" UV Resistant Cable Tie
- (4) #10/2 End Wire Crimp Cap (XEW30648)
- (1) Fence Mounted Home Run Wire Junction Box Splice Kit (CPLKJB)

### NOTES:

1. Attach wire directly to inside of horizontal fence pipe at 7 o' clock orientation. Use cable ties every 18 inches.
2. Attach wire to common and 26 Volt Tap.
3. Make sure all terminal block connections are tight.

**NOTE:** Fixture mounts to Round upright fence post 4.5 inch O.D. or smaller. Contact factory for other post mounting options.

