


Planning Instructions

750ft. Fence, 20ft. Spacing

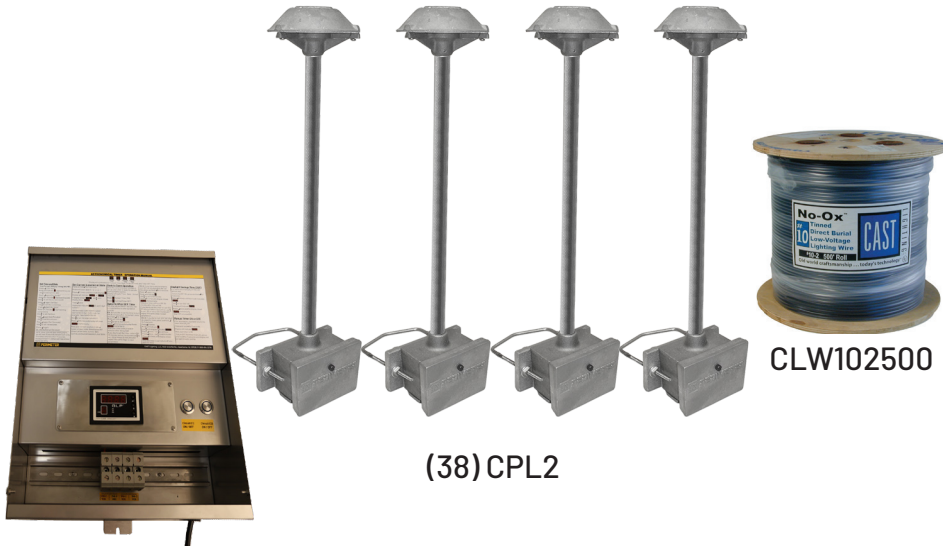


CLW102500

(38) CPL2

CPT600DCA

#CPLKJB Fence Mounted Home Run Wire Junction Box Splice Kit

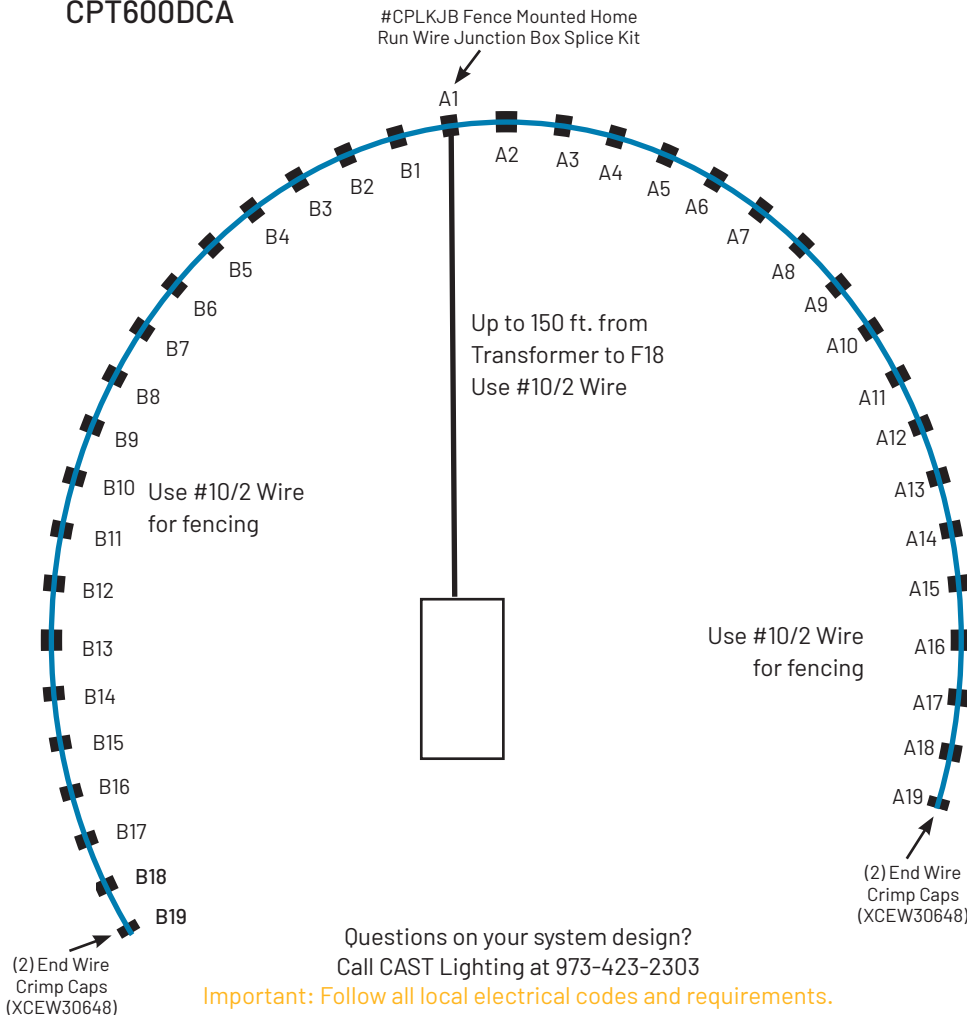

Kit Contents

Please check that you received all of these components.

- (38) CAST LED Perimeter Lights (CPL2)
- (1) CPT600DCA CAST Perimeter DC Lighting Transformer (CPT600DCA)
- (2) 500 Ft. Roll CAST #10/2 No-Ox Wire (CLW102500)
- (76) Quick-connect Posi-Tap splice connection (CPQC1) (2 per fixture)
- (4) Butt Crimp Wire Splice with Heat Shrink #10/2 to #10/2 (CLWS10)
- (400) Steel Ball Tie Wraps (CPSSTIE11)
- (2) Bags 3/8 Shrink Tubing 2" per Tie Wrap (CHS3850)
- (4) End Wire Crimp Cap (XCEW30648)
- (1) Fence Mounted Home Run Wire Junction Box Splice Kit (CPLKJB)

NOTES:

1. Attach wire directly to inside of horizontal fence pipe at 7 o' clock orientation. Use cable ties every 24 inches, and 2 inches of CHS3850 per tie wrap to protect wire.
2. Attach wire to common and 26 Volt Tap.
3. Make sure all terminal block connections are tight.

NOTE 1: Fixture mounts to Round upright fence post 4.5 inch O.D. or smaller. Contact factory for other post mounting options.

NOTE 2: 1/2 inch knockout in bottom of light for conduit if needed.

